

FIGURE 1

14

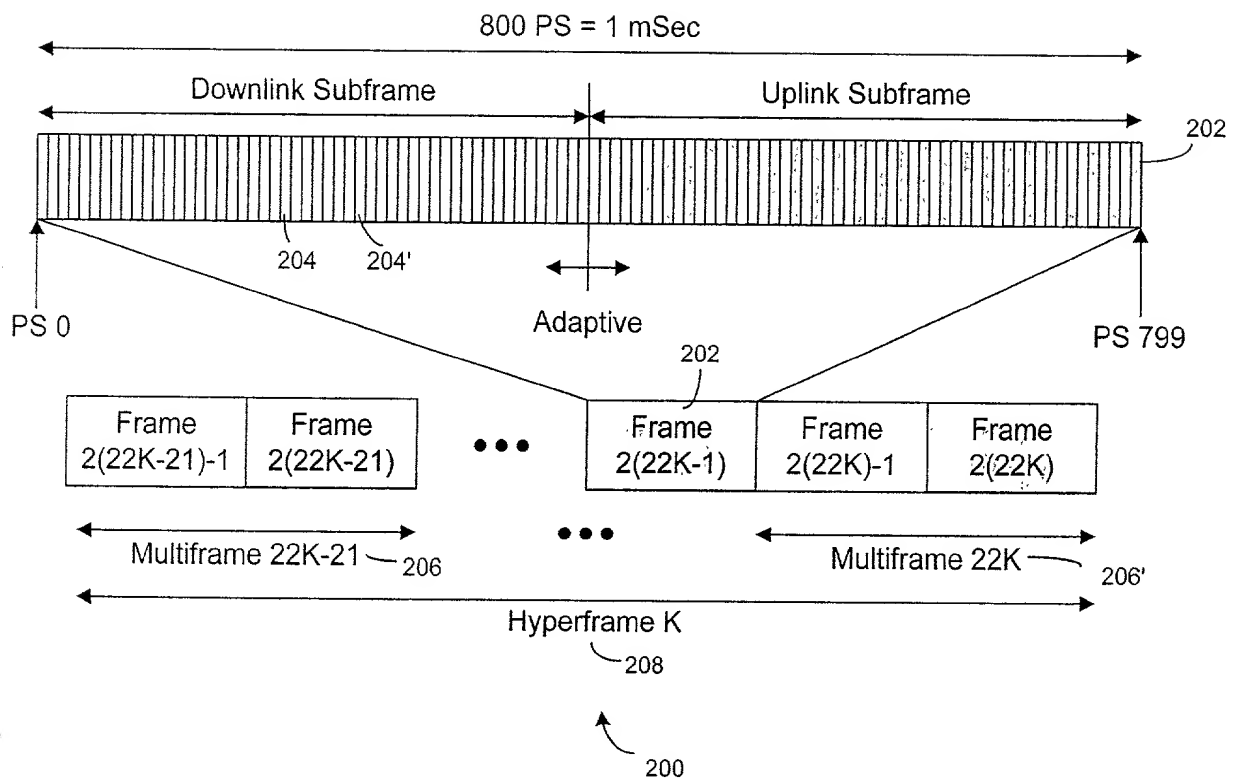


FIGURE 2

FIG. 3

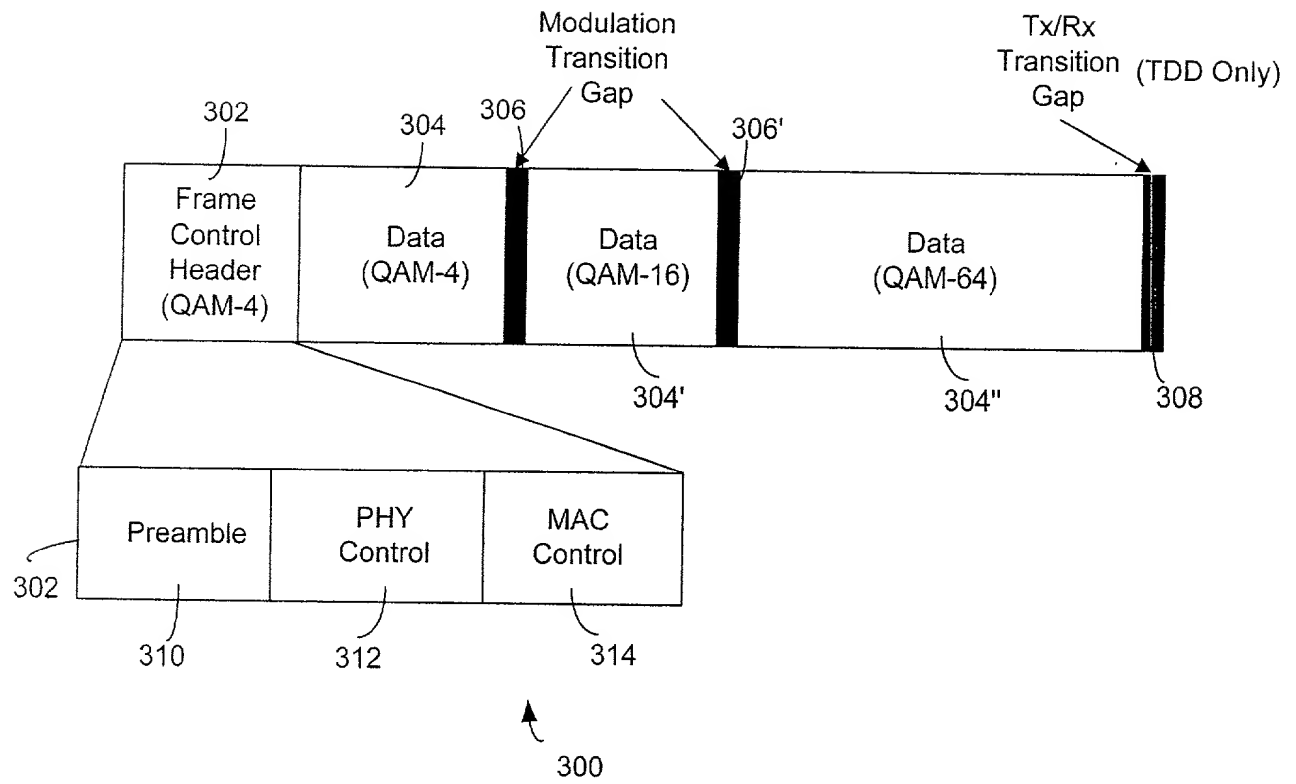


FIGURE 3

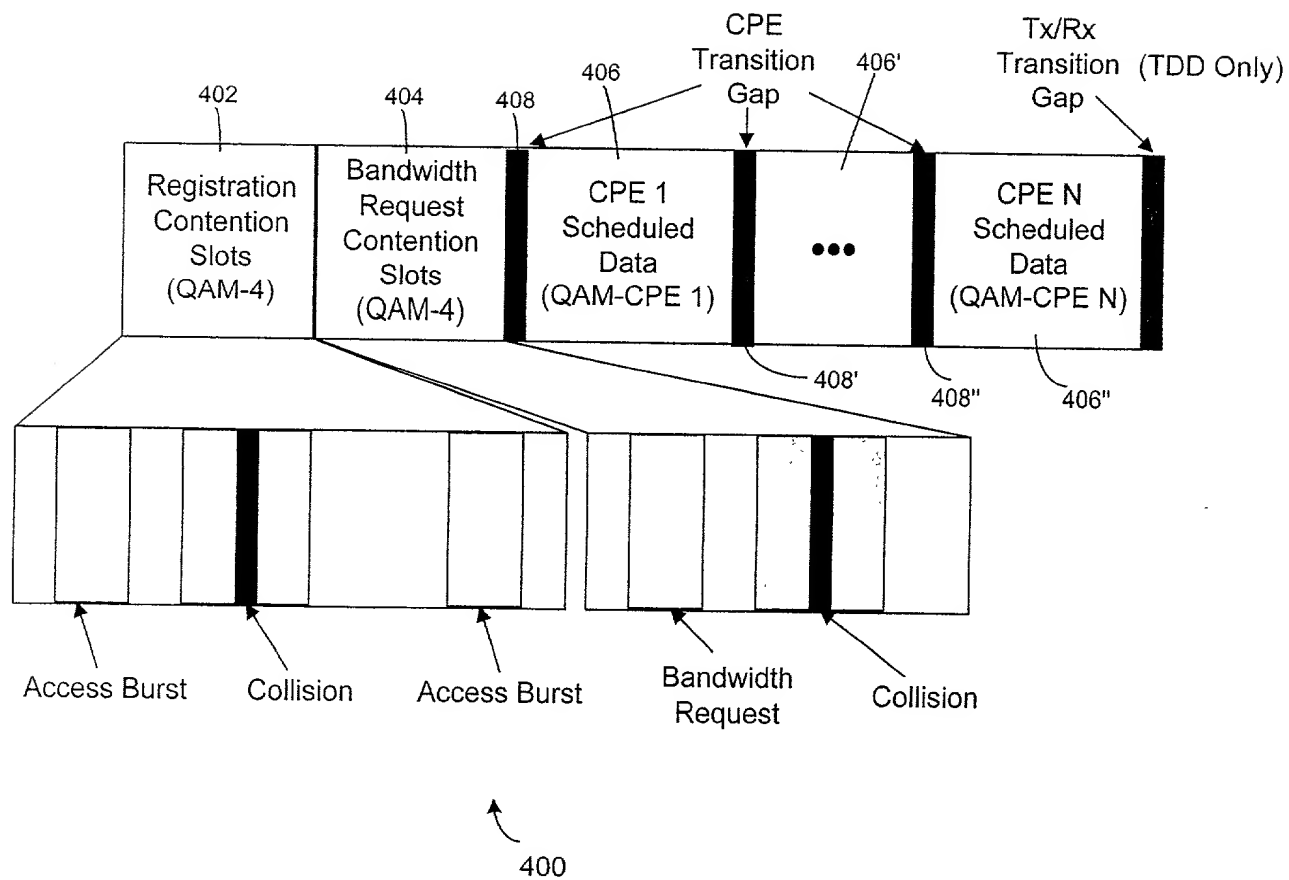


FIGURE 4

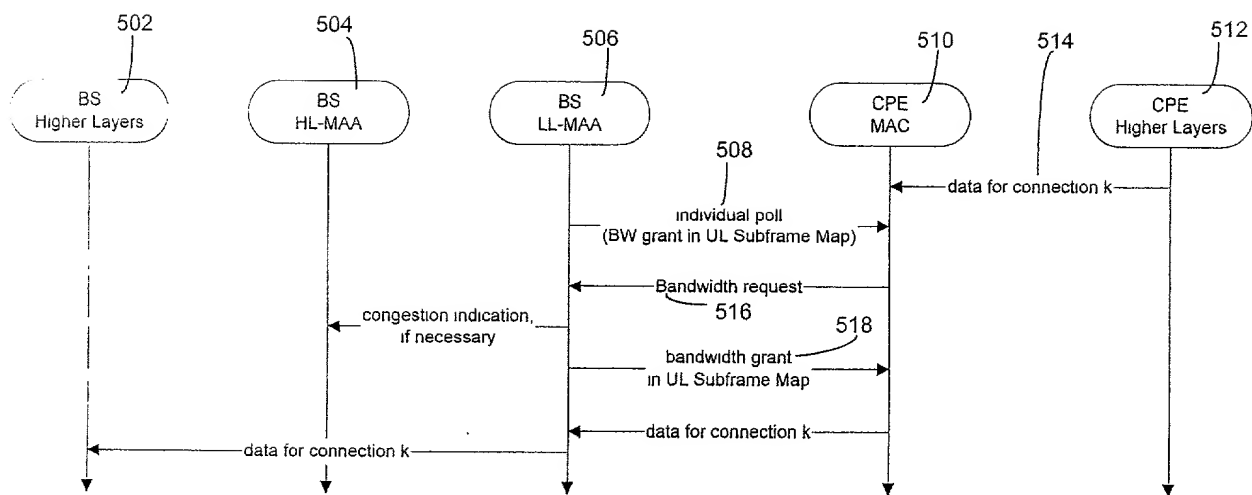


FIGURE 5

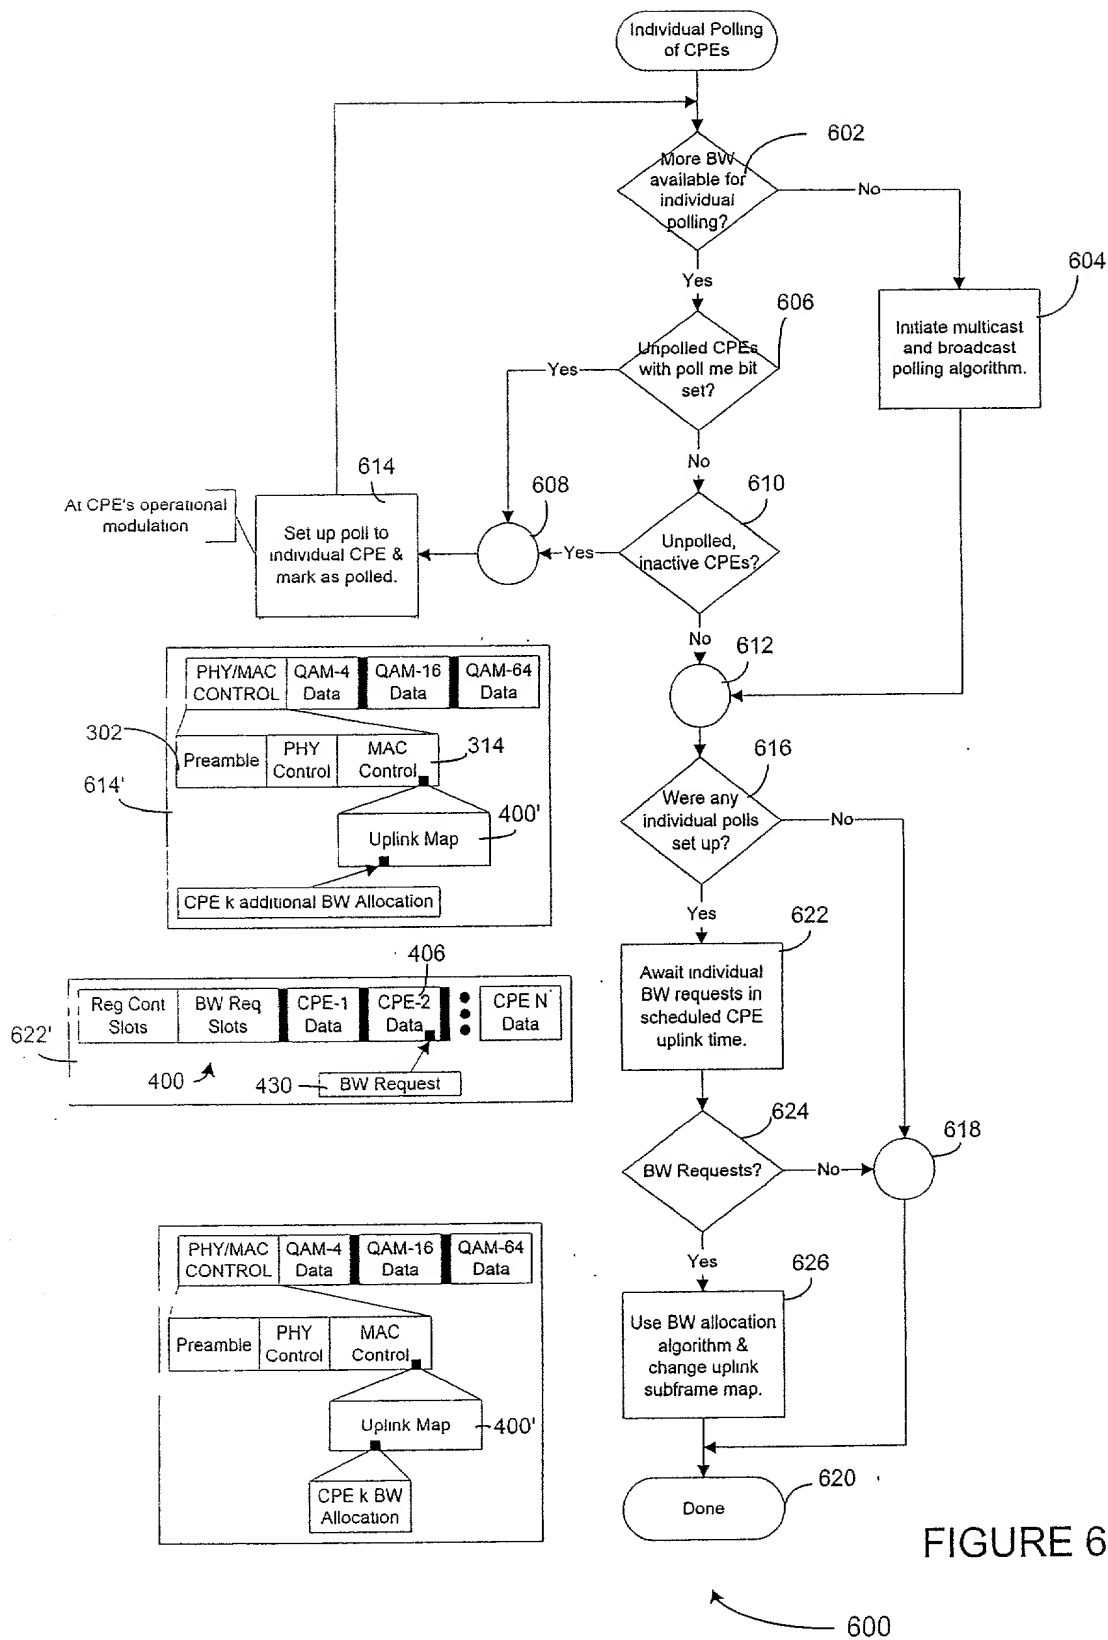


FIGURE 6

T.04050" T.0355/50

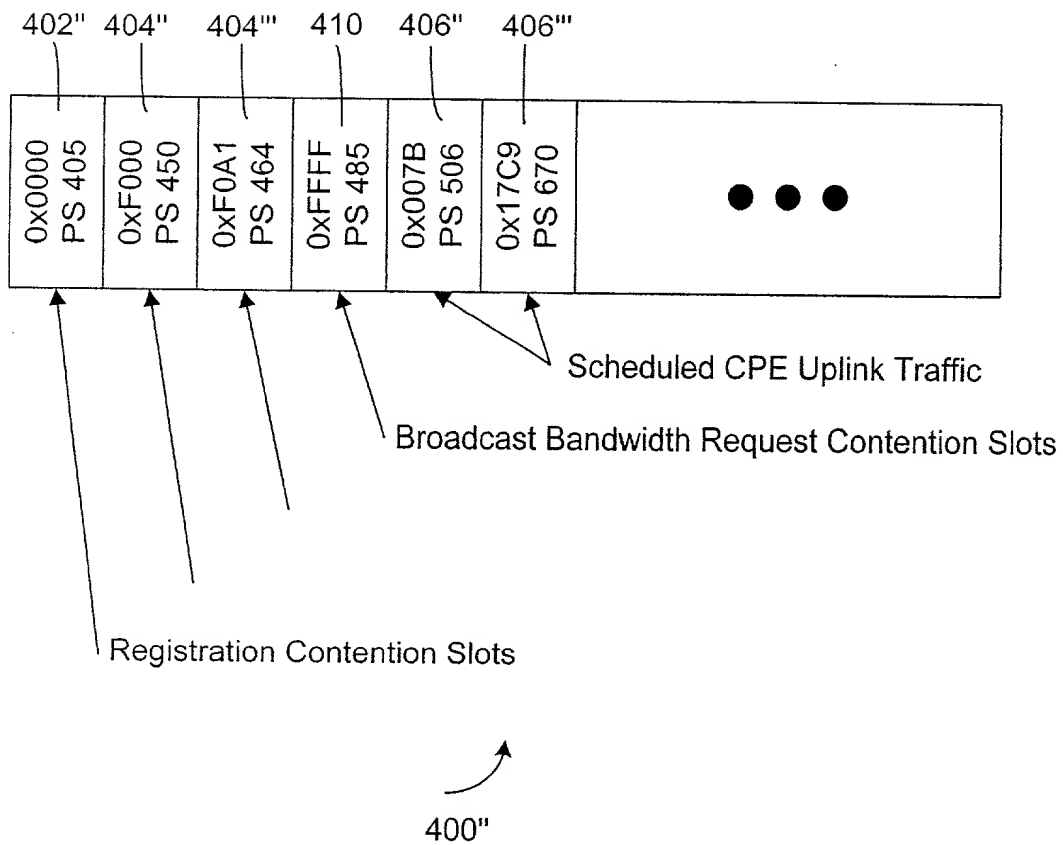


FIGURE 7

800

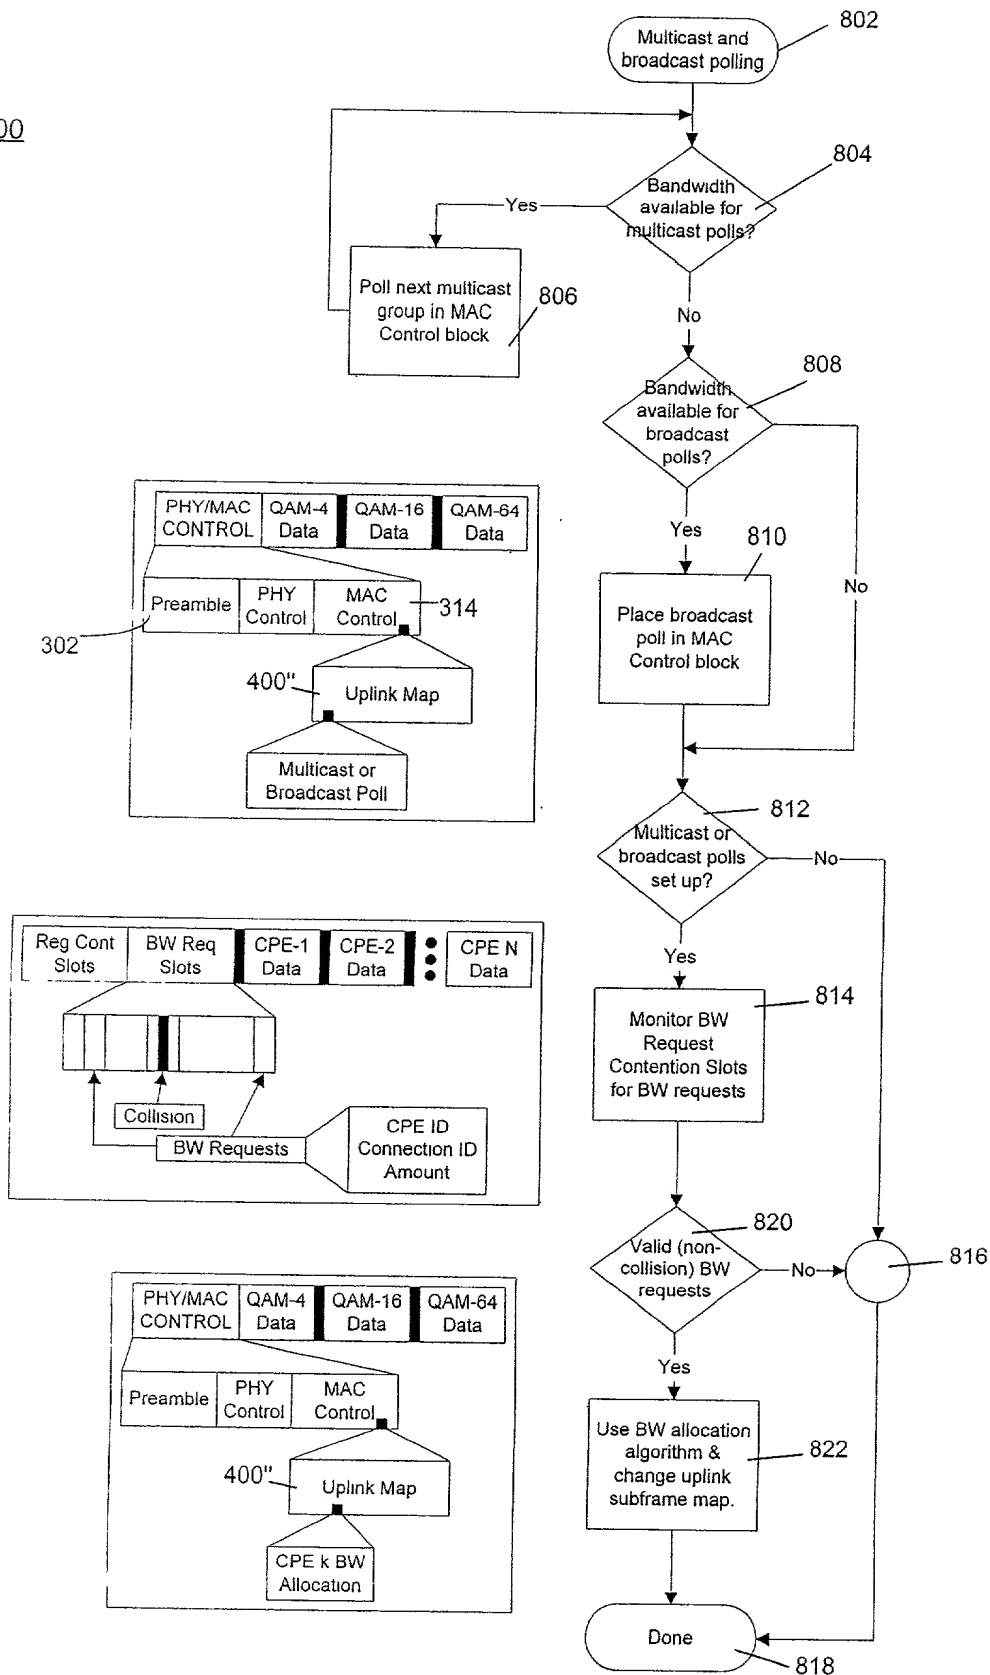


FIGURE 8



```

graph TD
    Start([Poll Me Bit Usage]) --> Step902{Piggybacking exhausted?}
    Step902 -- No --> Step904[Attempt piggybacking first]
    Step902 -- Yes --> Step906[Connection = first connection]
    Step904 --> Step906
    Step906 --> Step908{Any bandwidth needs?}
    Step908 -- No --> Step916[Connection = Next connection]
    Step908 -- Yes --> Step910{Packets Available?}
    Step910 -- Yes --> Step912[Set poll-me bit in available packet.]
    Step910 -- No --> Step918([Done])
    Step912 --> Step914{Last connection?}
    Step914 -- No --> Step916
    Step914 -- Yes --> Step918
    Step916 --> Step908

```

STEP 918

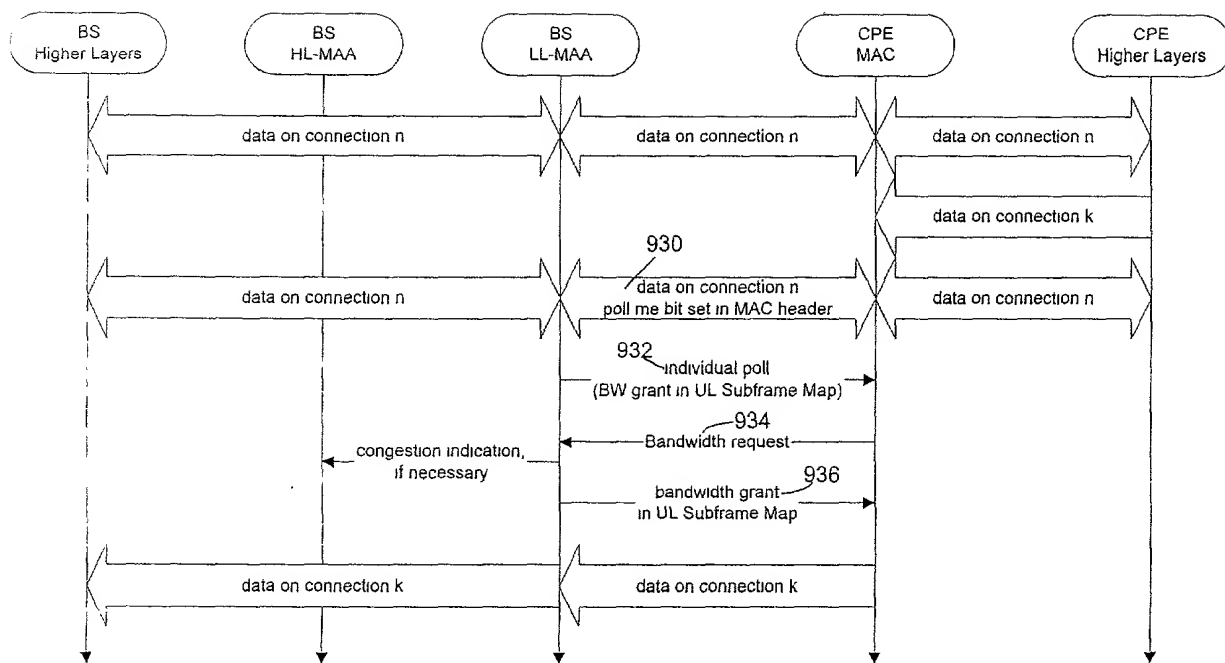


FIGURE 10

FIG. 11

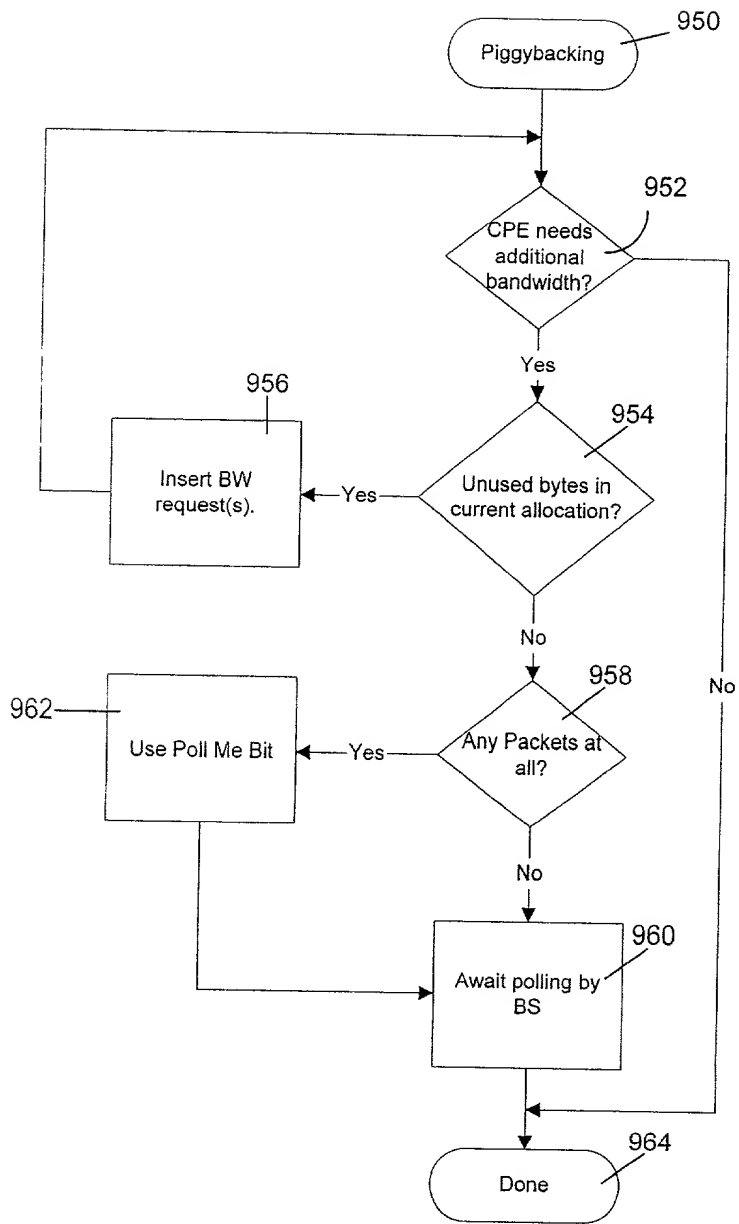


FIGURE 11

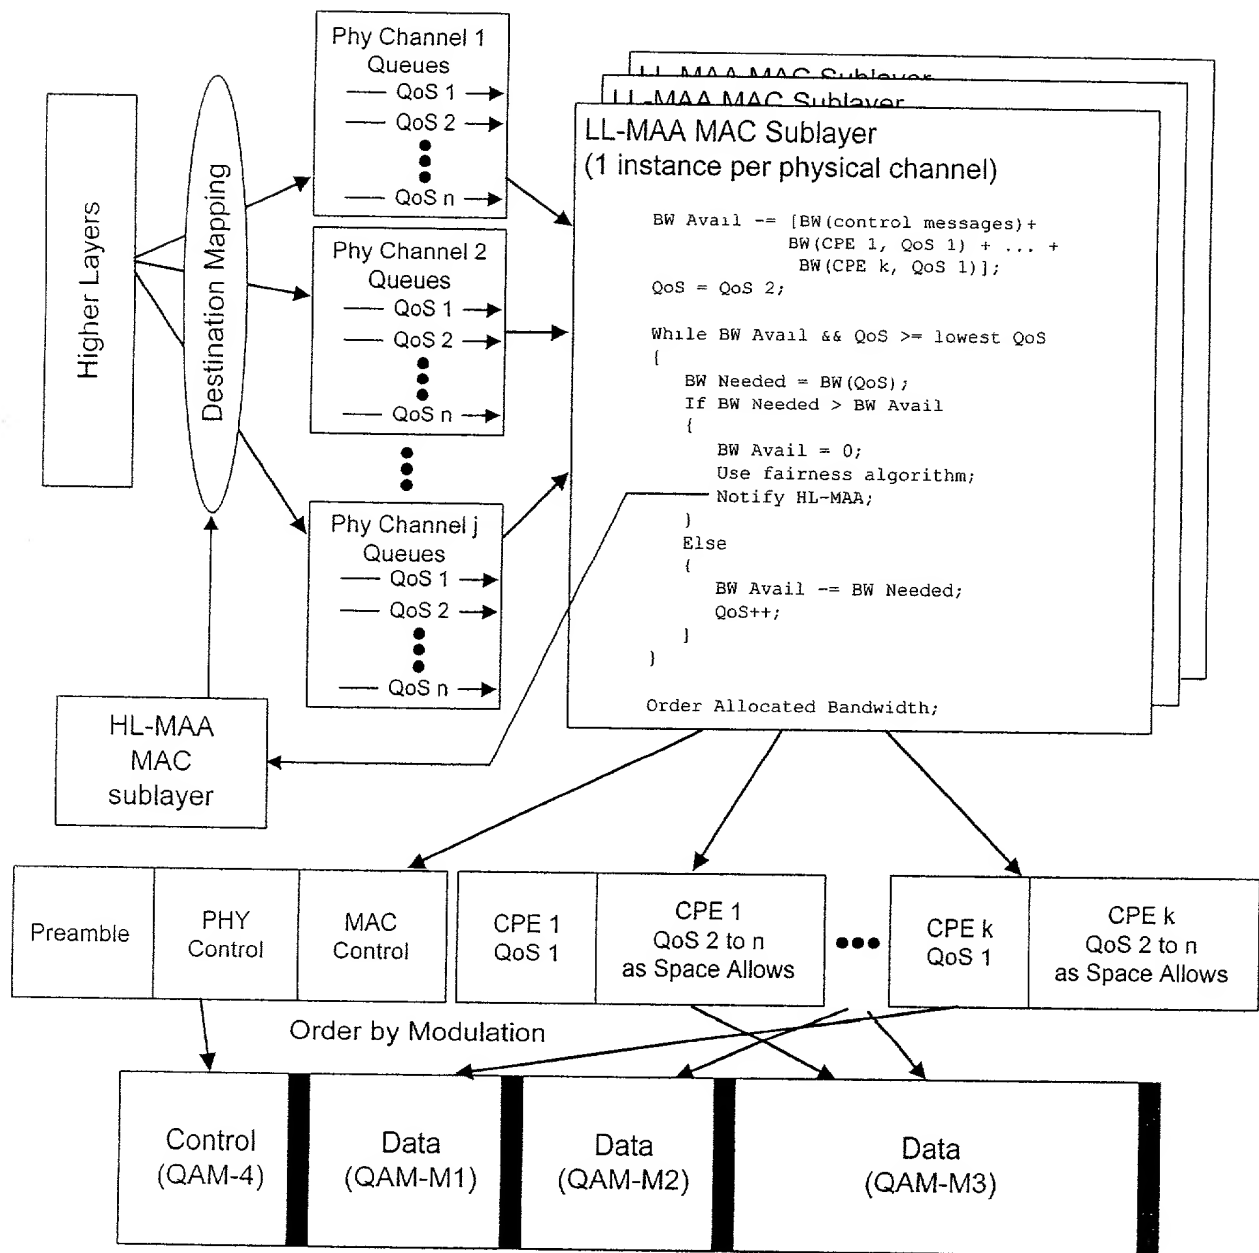


FIGURE 12

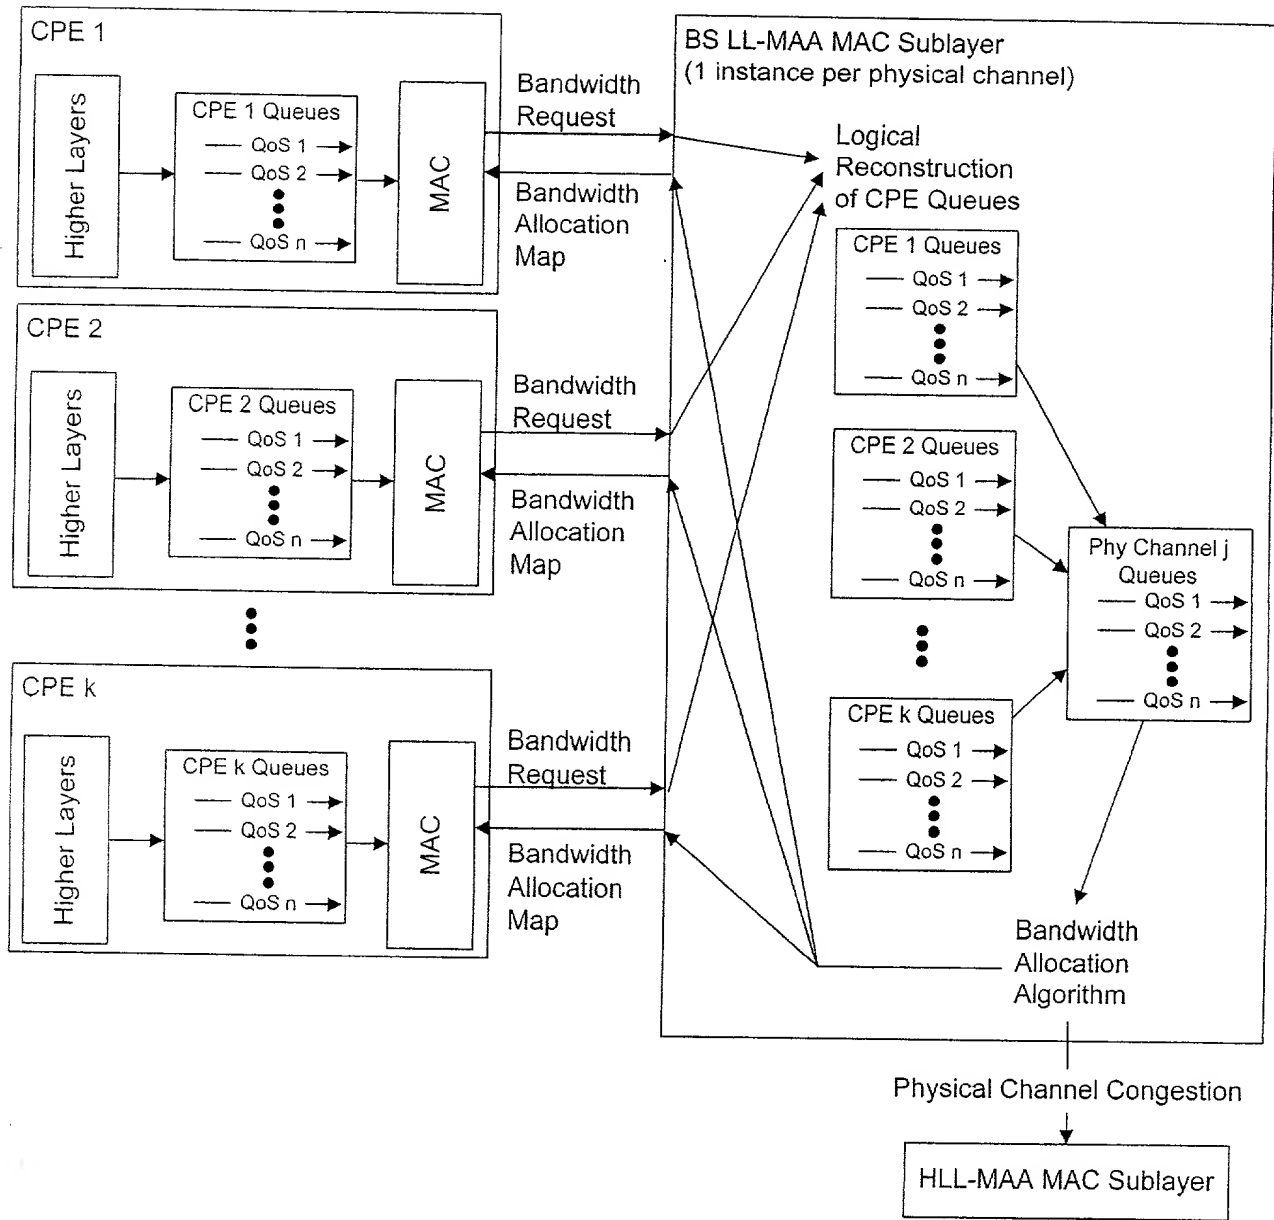


FIGURE 13

1400

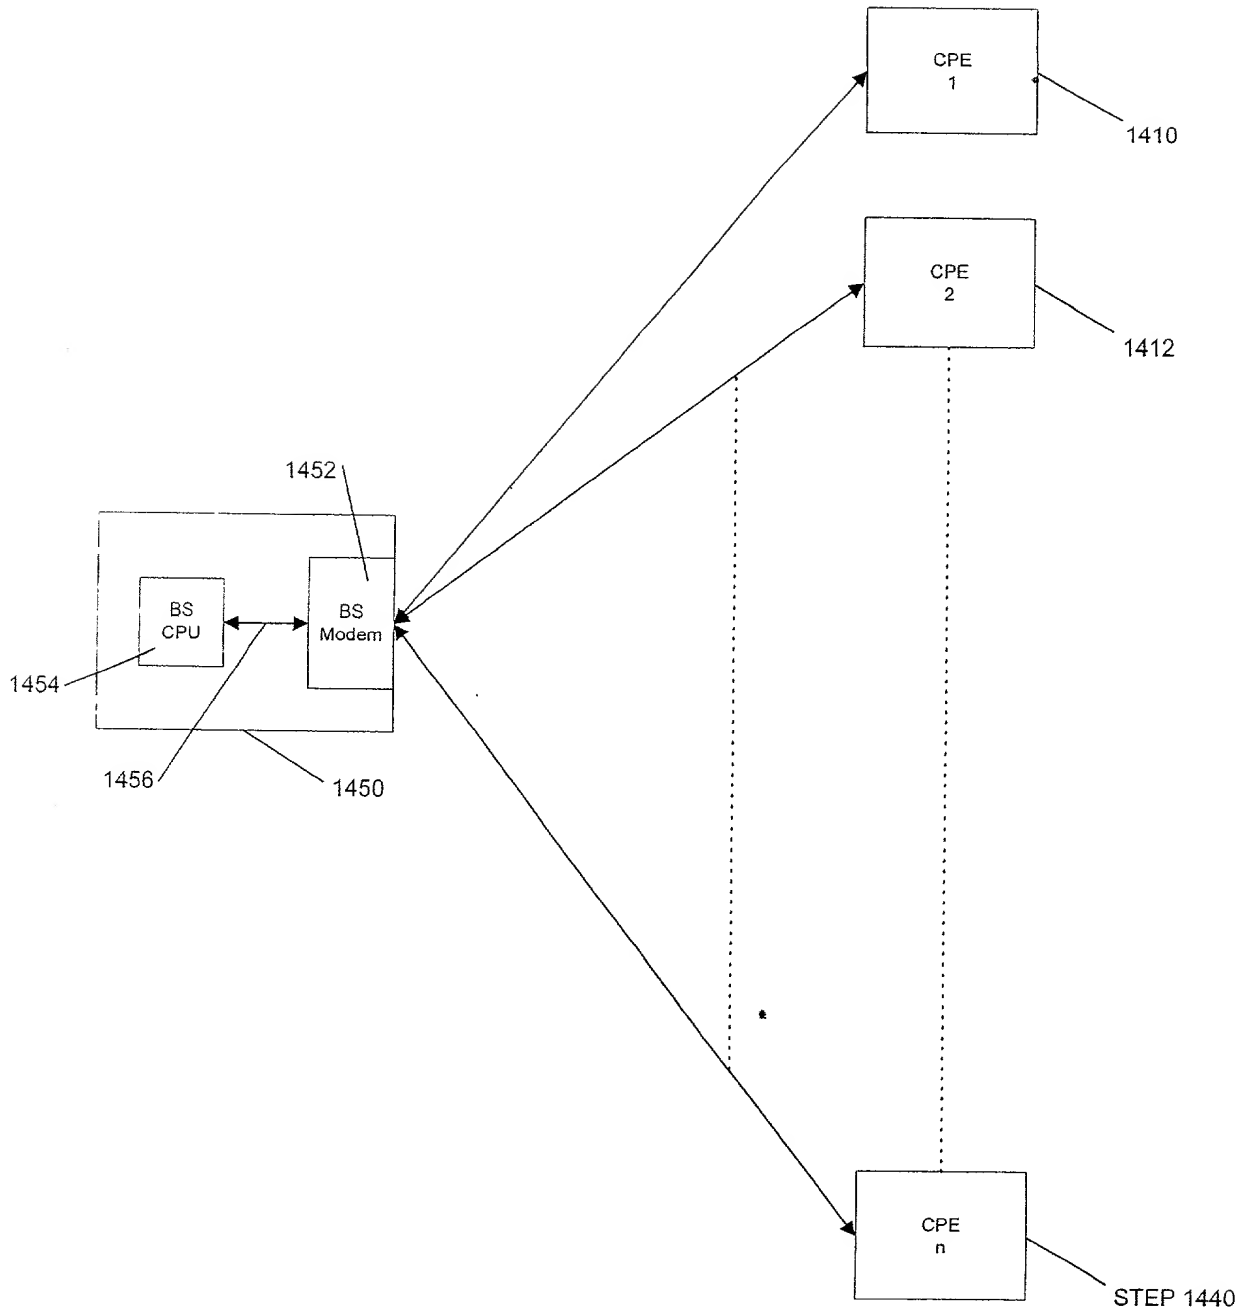


FIGURE 14

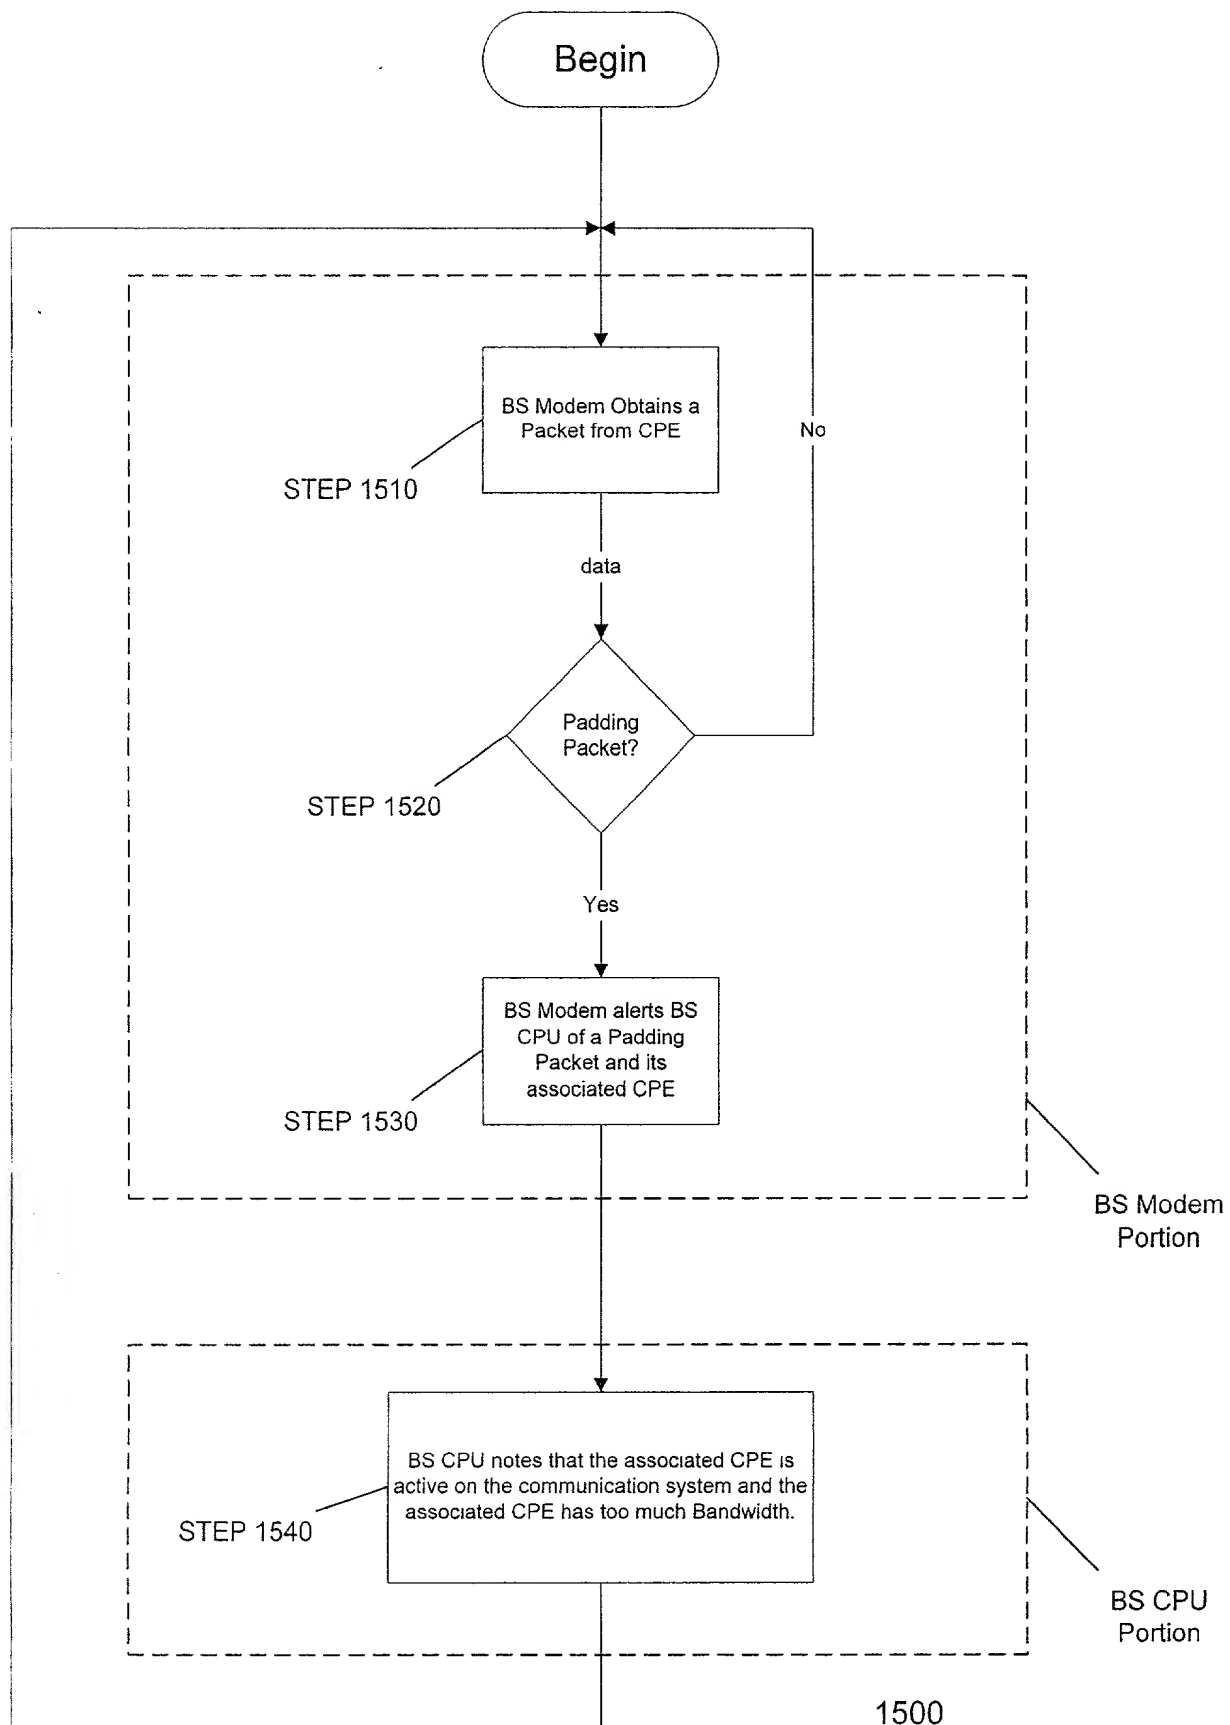


FIGURE 15